INSTALLATION & PARTS

CLIP-ONS

Universal / Ø50 mm

CO5002



41	0 mm	7°	TRACK
OFFSET	RISE	TILT RANGE	USE ONLY

FITMENT NOTE	Universal clip-ons for Ø50 mm forks. Matching diameter alone does not guarantee fitment. Controls or fairings may require adjustment.

01 / BEFORE YOU START

Fitment & installation

CHECK COMPATIBILITY

These universal clip-ons require a fork diameter of Ø50 mm at the mounting position. A matching diameter alone does not guarantee compatibility with your motorcycle.

Before installation, check the available mounting space and clearance around the upper triple clamp, controls, brake fluid reservoir and fairings. Some components may need to be repositioned or modified.

After adjustment, check the full steering range in both directions. Ensure that the handlebars and controls move freely without contacting surrounding parts, that cables and hoses are not stretched or pinched, and that the throttle returns freely at every steering position. Do not use the motorcycle until all clearance and operating checks have been completed successfully.

01 **PREPARE**

Remove grips, levers and other handlebar controls as required. Follow the motorcycle service manual for OEM components.

02 **REMOVE**

Remove the original handlebars and upper triple clamp as required for installation.

CONTINUED

Fitment & installation

03

INSTALL & ADJUST

Fit the ARP clip-ons and refit the upper triple clamp. Set the handlebar position and check control clearance before final tightening.

04

SECURE

Tighten the ARP fasteners to the specified torque. Use the motorcycle service manual for all OEM fasteners.


05

REFIT & INSPECT

Refit the controls. Complete all final checks before using the motorcycle.

02 / ASSEMBLY REFERENCE

Parts & fasteners

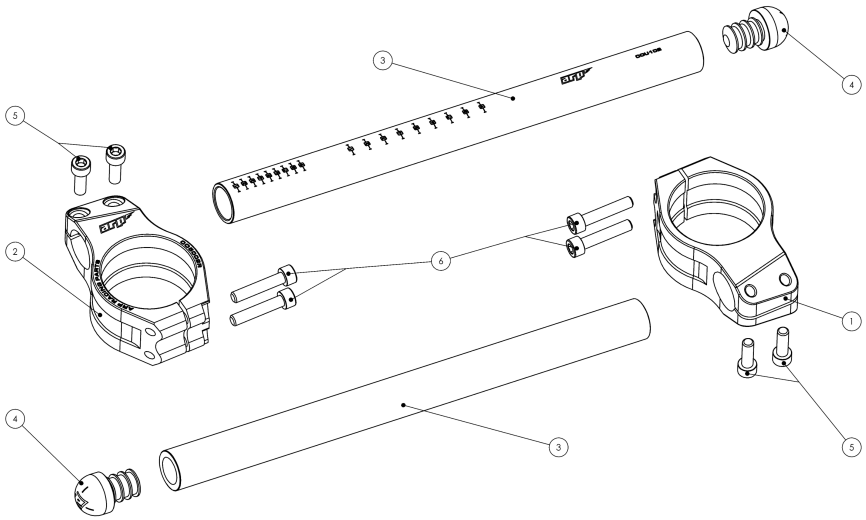


Quantities shown are for one complete set.

POS.	DESCRIPTION	SKU	QTY.
1	Left clamp	C05002L	1
2	Right clamp	C05002R	1
3	Handlebar tube	COU102	2
4	Handlebar end cap	COU301	2
5	Socket head cap screw M6 × 18	M6X18 DIN912 A2	4
6	Socket head cap screw M6 × 30	M6X30 DIN912 A2	4

03 / BEFORE RIDING

Settings & checks

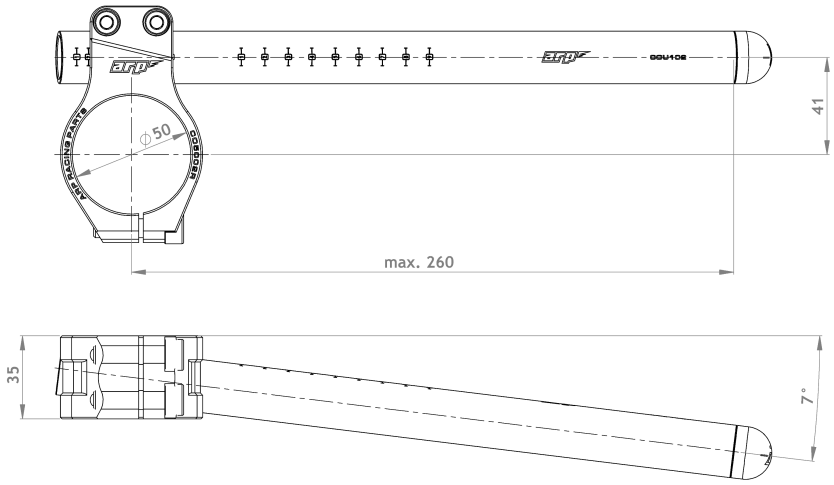

ARP FASTENERS

M6 / 10 N·m

CONTINUED

Settings & checks

FINAL CHECKS

- ☐ Steering moves freely from lock to lock; bars, levers and hands clear the motorcycle.
- ☐ Throttle returns freely throughout the steering range; cables and hoses are not pinched or stretched.
- ☐ Controls, clamps and tubes are secure. Do not ride if any interference or movement remains.

REPLACEMENT PARTS & SUPPORT

info@arp-racingparts.com arp-racingparts.com